

A1	Instrument cluster	5M 16M	N7	Exterior lamp failure monitoring module	13M	Y3x1	Kickdown valve connector (AT)	18D
A1e16	Preglow indicator lamp	4M	N14	Preglow time-limit relay module	4A	Y22	ISC electromagnetic actuator	20M
A1p1	ECT gauge	5M	N26	ATA control module	9A	Y27	EGR switchover valve	28M
A1p7	Electronic clock/tachometer	17M	N39	EDS control module	13A 23A	Y27/4	Boost pressure control switchover valve	28M
B2/1	VAF sensor (with IAT sensor [EDS])	26M	R9	Glow plugs	2M	Y27/5	Pressure control flap switchover valve	27M
B5/1	Pressure sensor (EDS)	25M	S2/2	Glow/starter switch	7M	Y31/1	EGR valve vacuum transducer	23M
B11/4	ECT sensor (EDFI, EIFI)	21M	S16/1	Starter lock-out/backup lamp switch	11M	Y31/5	Boost pressure control/pressure control flap vacuum transducer	22M
B11/7	Preglow system temperature sensor	3M	S16/6	Kickdown switch	19A	Z6/2	Ground supply connector sleeve (solder joint in connector)	20E 25E
B13	ECT gauge sensor	3M	S26/1	Heated windshield washer system thermostwitch	12A	Z7/2	Circuit 87 connector sleeve (left LH-SFI, feed from base module - N16/1)	19I 23E 28H
F1	Fuse and relay box		S27/6	A/C compressor cut-out/EGR microswitch	29A	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
F1-5	Fuse 5, circuit 15	6L 11B 18L	W1	Main ground (behind instrument cluster)				
F1-7	Fuse 7, circuit 15	6L 12L 19L	W9	Ground (at left headlamp unit)		Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		
F1-9	Fuse 9, circuit 30	18L	W10	Ground (battery)				
K1/1	Overvoltage protection relay module (87E, 7-pole)	14M	Grounds not indicated, components are connected on engine block or bodywork					
K9/1	Auxiliary fan relay module (stage 1)	17A	X4/1	Terminal block (circuit 30, interior)	1G 8I			
K10	Auxiliary fan relay module (stage 2)	16A	X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	14I			
K38	Starter lock-out relay module	10A	X11/4	Data link connector (DTC readout)	14A			
L3	Starter ring gear speed sensor	20M	X25	Preglow harness connector	3I			
L3x1	Starter ring gear speed sensor connector	20K	X26	Interior/engine connector (12-pole)	4G 14E 19E			
L7	Fuel rack position sensor	24M	X27	Starter harness connector	9I			
M1	Starter	9M	X42	ATA connector (front/rear)	9D			
N6	A/C compressor control module	15A 28A	X49/2	Backup lamp/starter lock-out switch connector	10I			
			Y3	Kickdown valve (AT)	18A			



