


A7/5	CST/RB hydraulic unit (power soft top)	9M	S21/3	Left rear power window switch	30M	W33/1	Ground (tank partition wall - left)	
A7/5k1	Relay	10M	S21/4	Right rear power window switch	29M	W33/2	Ground (tank partition wall - right)	
A7/5m1	Motor	9M	S21/7	Rear power windows safety switch (center console)	27M	Grounds not indicated, components are connected on engine block or bodywork		
A7/5x1	Soft top/roll bar hydraulic unit connector	9I	S83	RB switch (manual operation)	24M	X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	6H 32H
A25/1	Soft top compartment cover switch group	18M	S83/2	Left rear axle switch (roll bar)	35M	X6/1	Terminal block (circuit 58d) (1- or 2-pole)	20G
A25/1s1	Cover "closed" switch	17M	S83/3	Right rear axle switch (roll bar)	35M	X11/4	Data link connector (DTC readout)	31H
A25/1s2	Cover "locked" switch	18M	S83/4	RB switch (rear center console)	26M	X11/12	Power soft top test connector (4-pole)	35H
A25/1x1	Cover switch group connector	17I	S83/5	RB ?retracted? switch	18M	X23	RB solenoid valve connector (2-pole)	7H
B6	Hall-effect speed sensor	37M	S83/6	RB ?extended?switch	19M	X23/3	Soft top/interior connector (14-pole)	20F 36F
B10/4	In-car temperature sensor	22M	S84	Power soft top switch	23M	X23/4	RB/power windows connector (2-pole)	27H
B10/4b1	In-car temperature sensor	22L	S84/1	Left front soft top ?locked? switch	20M	X23/6	Soft top harness/soft top limit switch connector (4-pole)	13H
E15	Dome lamp (with shut-off delay and reading lamp)	21M	S84/1x1	Left front soft top ?locked? switch connector	20I	X53/5	Hall-effect sensor multipoint connector (VSS)	37H
E15h1	Warning buzzer	21L	S84/2	Right front soft top ?locked? switch	21M	X62/8	Rear axle multiple circuit junction connector	34K
E30	Center console roll bar malfunction indicator lamp	31M	S84/2x1	Right front soft top ?locked? switch connector	20I	Y55	Right CST valve block (4 connections)	2M
F1	Fuse and relay box		S84/3	Soft top ?open? switch (soft top in storage compartment)	14M	Y55y6	Soft top ?open? valve	1M
F1-A	Fuse A, circuit 15	37L	S84/4	Power soft top switch (top)	13M	Y55y7	Soft top ?close? valve	2M
F1-5	Fuse 5, circuit 15	36L	S84/5	Soft top compartment ?open? switch	16M	Y55y8	Fabric bow ?raise? valve	2M
F1-6	Fuse 6, circuit 15	36L	S84/5x1	Soft top compartment ?open? switch connector	16I	Y55y9	Fabric bow ?lower? valve	3M
F24	Auxiliary fuse holder (CST/RB)	6M	S84/6	Soft top fabric bow ?raised? switch	15M	Y56	Left CST valve block (3 connections)	4M
F24/1	Auxiliary fuse holder (hydraulic unit)	8M	S84/6x1	Soft top fabric bow ?raised? switch connector	15I	Y56y3	Soft top compartment lock valve	5M
N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	39A	S84/7	Soft top fabric bow ?down? switch	14M	Y56y4	Fabric bow lock valve	4M
N22	A/C pushbutton control module (Automatic A/C)	38M	S84/8	Soft top fabric bow ?locked? switch	17M	Y56y5	Soft top compartment cover drive valve	5M
N52	Power soft top control module	19A	S84/8x1	Soft top fabric bow ?locked? switch connector	16I	Y57	RB valve block	11M
N53	RB control module (crash deployment)	33M	W1	Main ground (behind instrument cluster)		Y57/1	RB deployment solenoid	7M
N57	CF control module (power windows, sliding/pop-up roof)	12M	W12	Ground (center console)				
S14	Rear window defroster switch	39M	W24/1	Ground (roll bar deployment unit)				
			W32	Ground (tunnel - right rear)				

Y57y10	Rod side valve	11M
Y57y11	Piston side valve	12M
Z21/7	Fabric bow connector sleeve (switched ground, ATA)	17F
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		

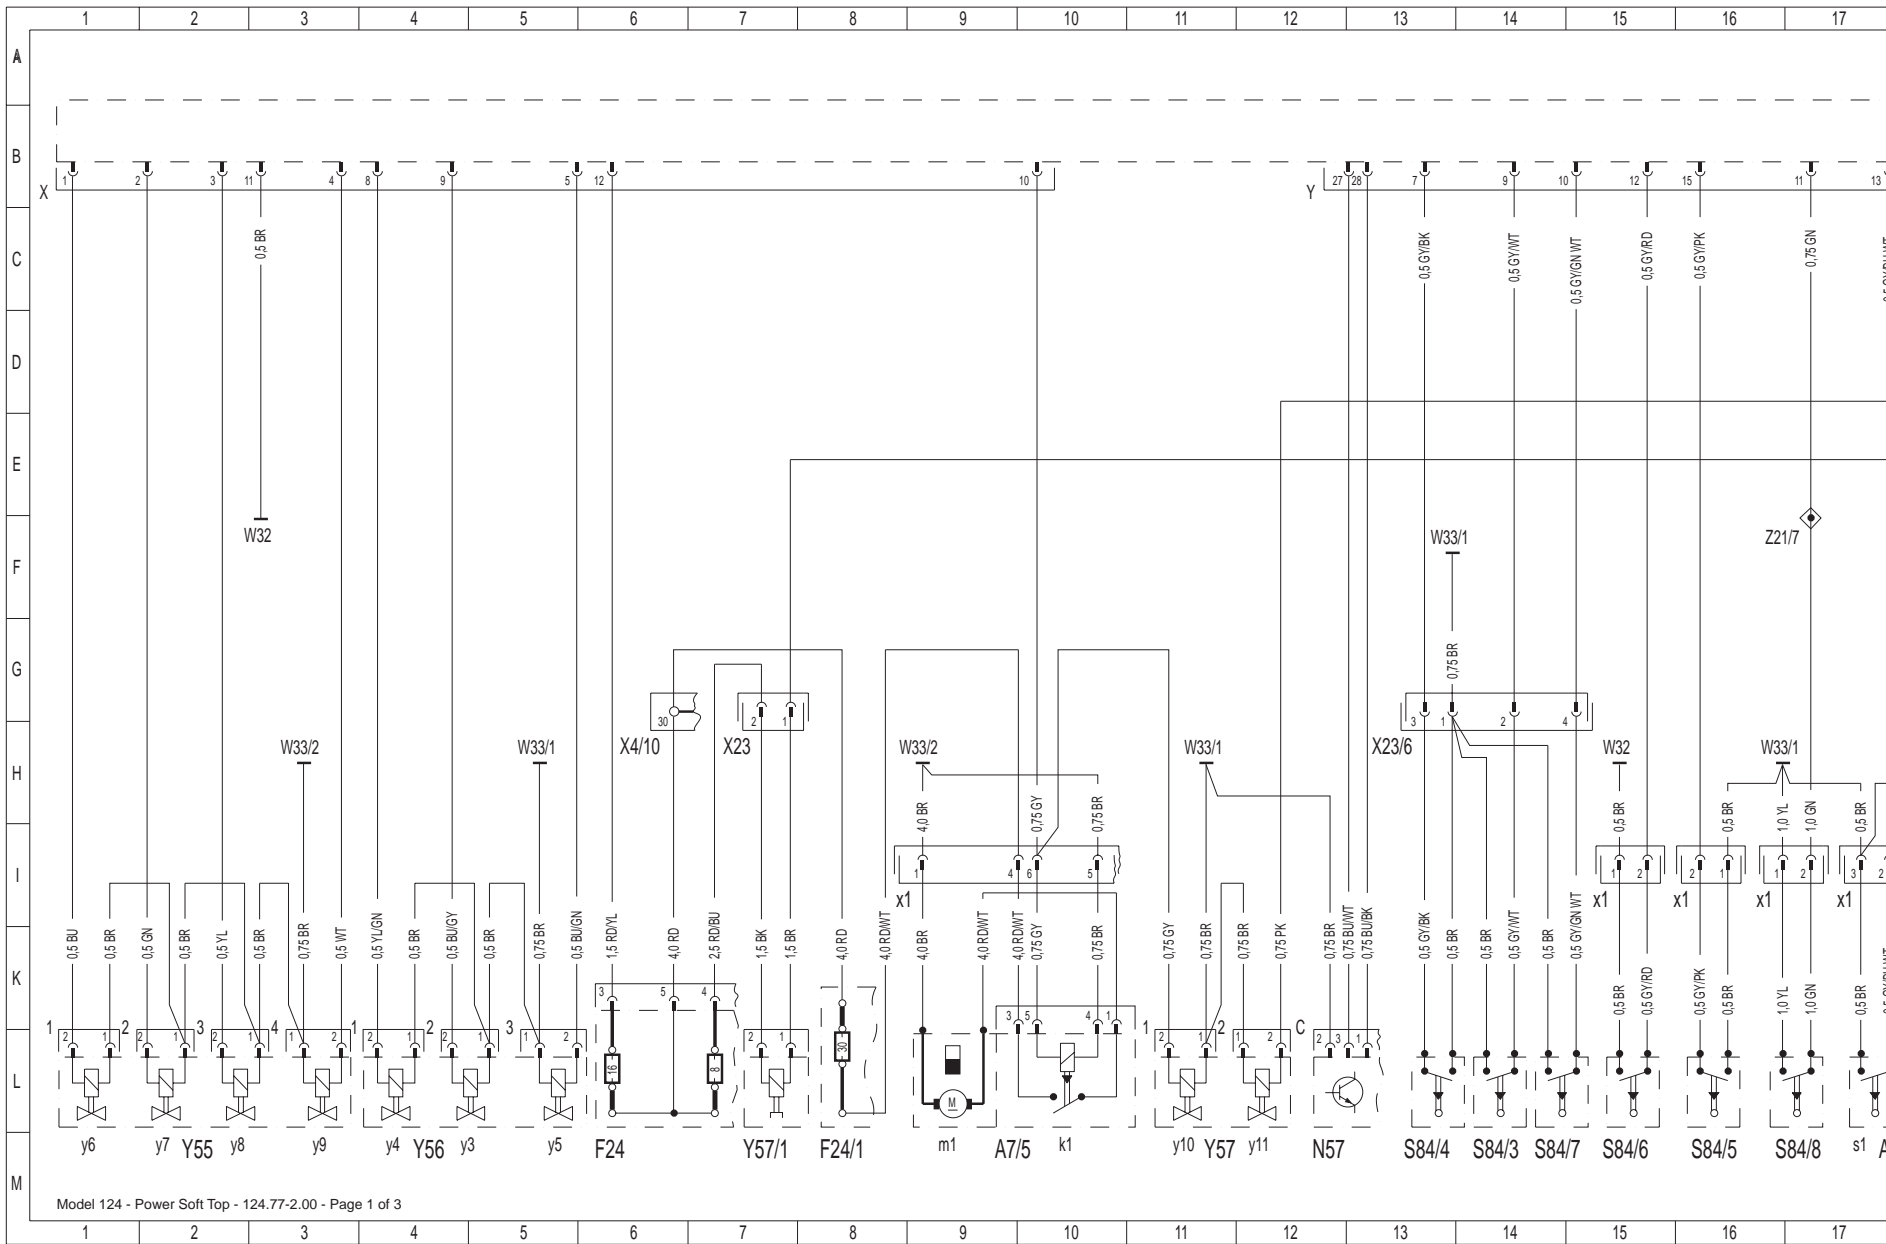

N52

