


A1	Instrument cluster	15M	E4e3	Backup lamp	33A	F1-5	Fuse 5, circuit 15	17G
A1e1	Left turn signal indicator lamp	16M	E4e4	Stop lamp	33A			38H
A1e2	Right turn signal indicator lamp	15M	E4e6	Right hand side marker lamp	33A	F1-6	Fuse 6, circuit 15	2G
A1e3	High beam indicator lamp	16M	E6/1	Left turn signal/side marker lamp (USA)	28A	F1-7	Fuse 7, circuit 15	37H
A1e14	Exterior lamp failure indicator lamp	17M	E6/1e1	Turn signal	28A	F1-8	Fuse 8, circuit 58 L	22G
A1h2	Audible turn signal indicator	15M	E6/1e2	Side marker lamp (USA)	28A	F1-9	Fuse 9, circuit 30	1G
A1r1	Instrument illumination rheostat	14M	E6/2	Right turn signal/side marker lamp (USA)	26A	F1-13	Fuse 13, circuit 56b	19G
A2	Radio	1M	E6/2e1	Turn signal	27A	F1-14	Fuse 14, circuit 56b	19G
A2/4	Radio control module	1M	E6/2e2	Side marker lamp (USA)	27A	F1-15	Fuse 15, circuit 56a	18G
B6	Hall-effect speed sensor	34A	E10/1	Center air outlet illumination	4A	F1-16	Fuse 16, circuit 56a	18G
E1	Left headlamp unit	29A	E10/3	Right air outlet illumination	3M	K5	Power seat relay module (USA)	3M
E1e1	High beam	29A	E15/4	Dome/reading lamp (with seat belt reminder lamp)	9A	K24	CF relay module	8A
E1e2	Low beam	29A	E15/3	Rear dome lamp	9A	M11	Automatic antenna (radio/telephone) (USA)	11M
E1e4	Fog lamp	29A	E17/3	Left front door entrance/exit lamp	6M 8M	N2/4	Seat belt warning module (USA)	6A
E2	Right headlamp unit	25A	E17/4	Right front door entrance/exit lamp	5M 9M	N4/1	EA/CC/ISC control module	35A
E2e1	High beam	25A	E17/5	Left rear door entrance/exit lamp	11A	N7	Exterior lamp failure monitoring module	27M
E2e2	Low beam	25A	E17/6	Right rear door entrance/exit lamp	10A	N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	16A
E2e4	Fog lamp	25A	E18/1	Trunk lamp	12M	N40	Audio power amplifier (circuit 58D)	1A
E3	Left taillamp unit	30A	E19/1	Left license plate lamp	39A	N57	CF control module (power windows, sliding/pop-up roof)	9M
E3e1	Turn signal lamp	30A	E19/2	Right license plate lamp	38A	R3	Front cigar lighter (with ashtray illumination)	2M
E3e2	Tail/parking lamp	30A	E21	Center high mounted stop lamp	34A	R3e1	Illumination	2M
E3e3	Backup lamp	31A	F1	Fuse and relay box		R3x1	Illuminated cigar lighter connector	2K
E3e4	Stop lamp	31A	F1-C	Fuse C, circuit 30	10G	S1	Exterior lamp switch	19A
E3e5	Rear fog lamp	30A	F1-2	Fuse 2, circuit 15R	19G	S2/2	Glow/starter switch	23A
E3e6	Left hand side marker lamp	31A	F1-3	Fuse 3, circuit 58R	20G	S4	Combination switch	17A
E4	Right taillamp unit	32A	F1-4	Fuse 4, circuit 58N	20G	S4s1	Turn signal switch	17B
E4e1	Turn signal lamp	32A						
E4e2	Tail/parking lamp	32A						

S4s2	Headlamp flasher switch	18B
S4s3	Low beam switch	19C
S4x1	Combination switch connector	16D
S6	Hazard flasher switch	2A
S8/2	Warning buzzer contact (exterior lamps/CL)	5A
S9/1	Stop lamp switch (4-pole)	38A
S16/1	Starter lock-out/backup lamp switch	37A
S17/3	Left front door switch	7A
S17/4	Right front door switch	4M
S17/5	Left rear door switch	15A
S17/6	Right rear door switch	14A
S17/8	Trunk lamp switch	13M
S18	Rear dome lamp switch	12A
W1	Main ground (behind instrument cluster)	
W6	Ground (left wheelhousing in trunk)	
W7	Ground (right wheelhousing in trunk)	
W10	Ground (battery)	
W12	Ground (center console)	
W14	Ground (ABS hydraulic unit bracket)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior)	1K 20F 23F
X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	24H
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	1F 12D
X6/2	Connector (circuit 58R) (1-pole) I	26F

X18	Interior/taillamp harness connector (8-pole)	7H 27H 34F
X24	Headlamp harness connector	27F
X30	Accessory equipment connector block	10M
X42/1	ATA diode holder	13A
X42/2	Right rear door contact switch/dome lamp connector (ATA) (1-pole)	13D
X42/7	Right front door contact switch connector (ATA)	5H
X42/14	ATA connector (trunk lamp)	13I
X49/2	Backup lamp/starter lock-out switch connector	36E
X49/3	Backup lamp switch signal connector (ASR/EA) (1-pole)	35D
Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	5I 8I 11D
Z81	Circuit 58d connector sleeve	2D 14I
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

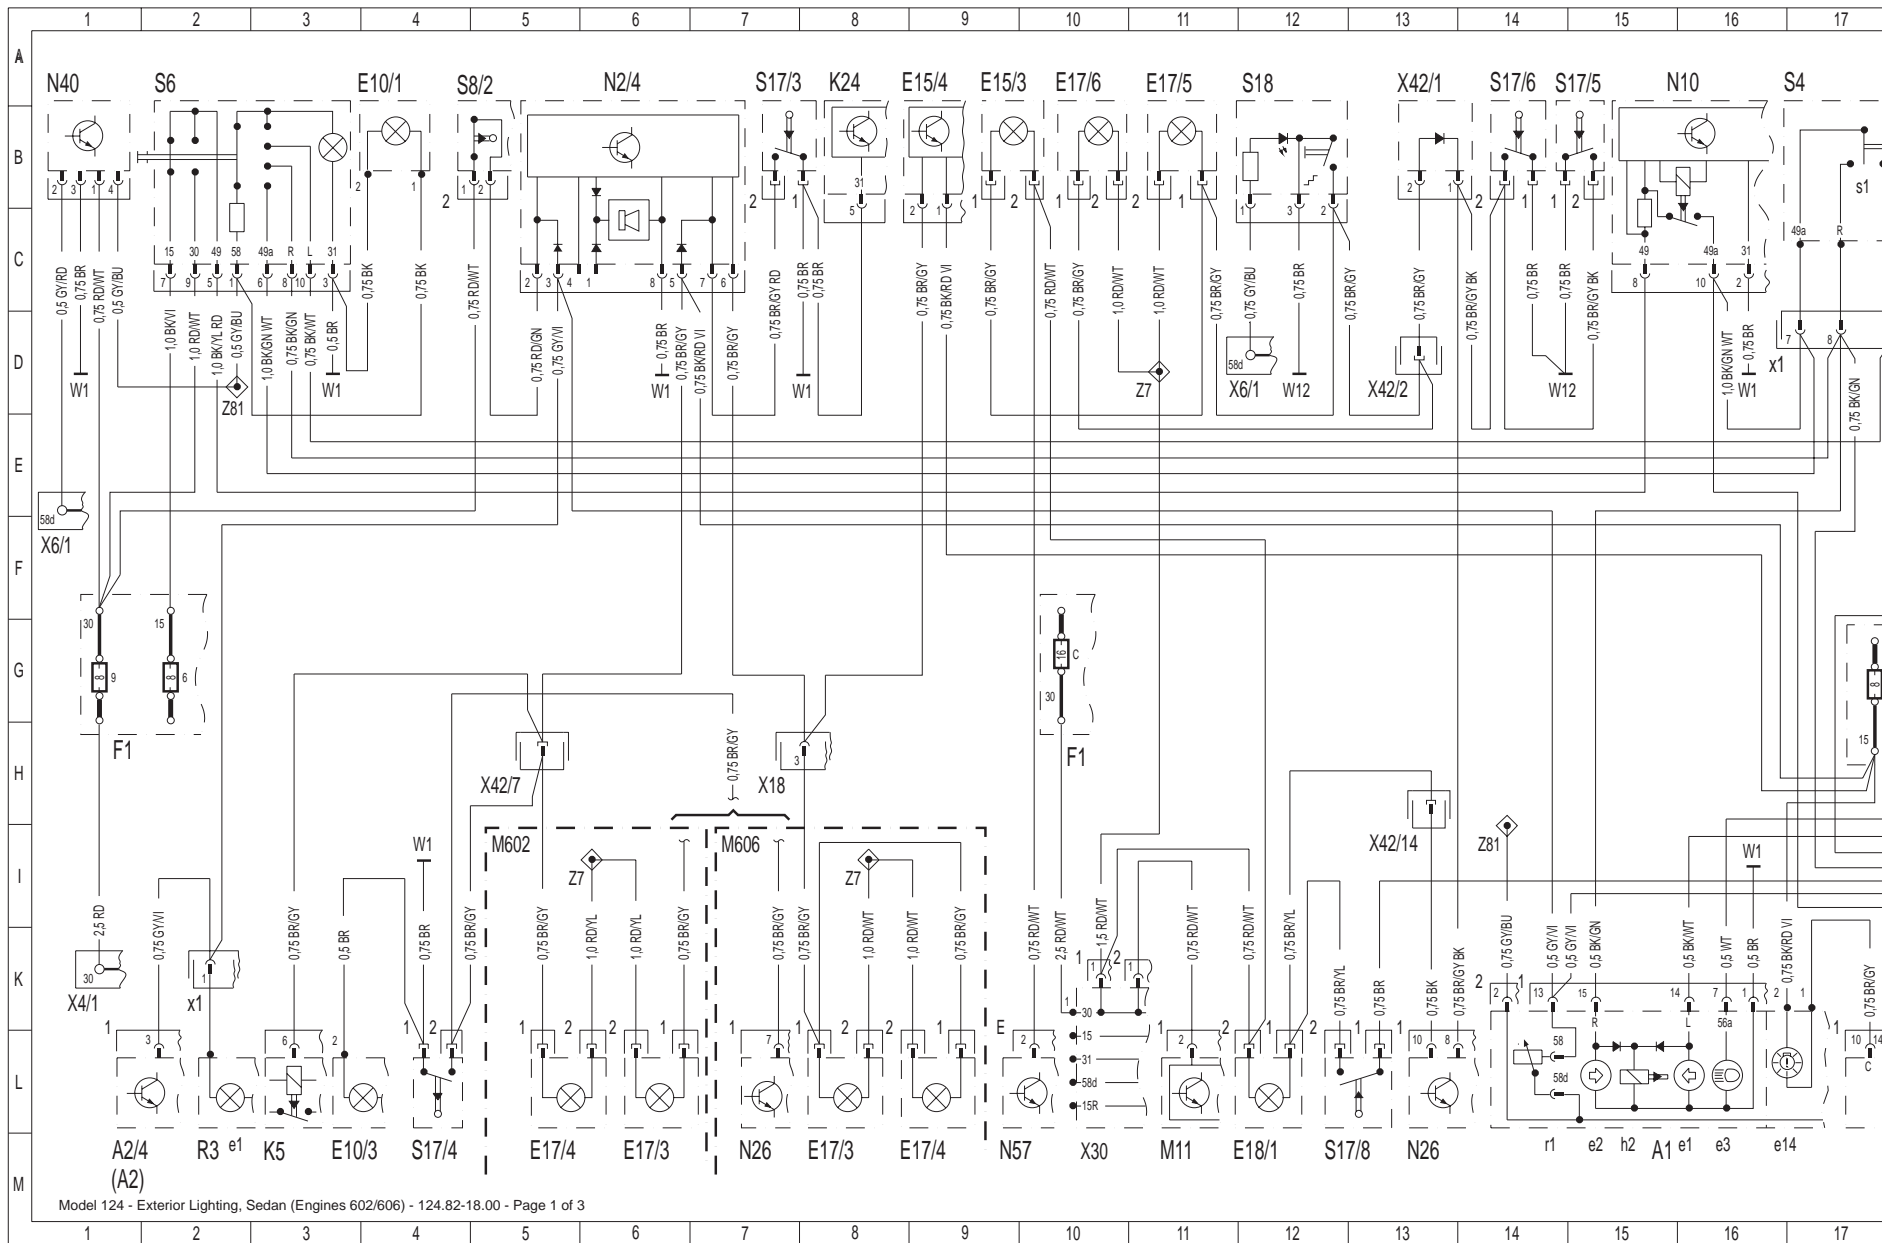

Model 124 - Exterior Lighting, Sedan (Engines 602/606) - 124.82-18.00 - Page 1 of 3

