

A1	Instrument cluster	14M	E4e3	Backup lamp	32A	F1-9	Fuse 9, circuit 30	2H
A1e1	Left turn signal indicator lamp	14M	E4e4	Stop lamp	33A	F1-13	Fuse 13, circuit 56b	19G
A1e2	Right turn signal indicator lamp	13M	E4e6	Right hand side marker lamp	33A	F1-14	Fuse 14, circuit 56b	18G
A1e3	High beam indicator lamp	15M	E6/1	Left turn signal/side marker lamp (USA)	27A	F1-15	Fuse 15, circuit 56a	18G
A1e14	Exterior lamp failure indicator lamp	15M	E6/1e1	Turn signal	28A	F1-16	Fuse 16, circuit 56a	18G
A1h2	Audible turn signal indicator	14M	E6/1e2	Side marker lamp (USA)	28A	K5	Power seat relay module (USA)	4M
A1r1	Instrument illumination rheostat	13M	E6/2	Right turn signal/side marker lamp (USA)	26A	K24	CF relay module	9A
A2	Radio	3M	E6/2e1	Turn signal	27A	N2/4	Seat belt warning module (USA)	7A
A2/4	Radio control module	3M	E6/2e2	Side marker lamp (USA)	27A	N4/1	EA/CC/ISC control module	35A
B6	Hall-effect speed sensor	34A	E10/1	Center air outlet illumination	4A	N7	Exterior lamp failure monitoring module	27M
E1	Left headlamp unit	28A	E10/3	Right air outlet illumination	5A	N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	14A
E1e1	High beam	29A	E15/4	Dome/reading lamp (with seat belt reminder lamp)	8A	N26	ATA control module	7M
E1e2	Low beam	29A	E17/3	Left front door entrance/exit lamp	10A	N40	Audio power amplifier (circuit 58D)	1A
E1e4	Fog lamp	28A	E17/4	Right front door entrance/exit lamp	11A	N42	Left SBE control module	8M
E2	Right headlamp unit	25A	E19/1	Left license plate lamp	39A	N43	Right SBE control module	12M
E2e1	High beam	25A	E19/2	Right license plate lamp	38A	R3	Front cigar lighter (with ashtray illumination)	4M
E2e2	Low beam	25A	E21	Center high mounted stop lamp	34A	R3e1	Illumination	4M
E2e4	Fog lamp	26A	F1	Fuse and relay box		R3x1	Illuminated cigar lighter connector	4L
E3	Left taillamp unit	30A	F1-C	Fuse C, circuit 30	12B	S1	Exterior lamp switch	19A
E3e1	Turn signal lamp	30A	F1-2	Fuse 2, circuit 15R	19G	S2/1	Ignition/starter switch	23A
E3e2	Tail/parking lamp	30A	F1-3	Fuse 3, circuit 58R	20G	S4	Combination switch	16A
E3e3	Backup lamp	30A	F1-4	Fuse 4, circuit 58N	19G	S4s1	Turn signal switch	16B
E3e4	Stop lamp	31A	F1-5	Fuse 5, circuit 15	17G 36H 6B	S4s2	Headlamp flasher switch	18B
E3e5	Rear fog lamp	29A				S4s3	Low beam switch	18C
E3e6	Left hand side marker lamp	31A				S4x1	Combination switch connector	16D
E4	Right taillamp unit	32A	F1-6	Fuse 6, circuit 15	2H	S6	Hazard flasher switch	2A
E4e1	Turn signal lamp	32A	F1-7	Fuse 7, circuit 15	35H			
E4e2	Tail/parking lamp	32A	F1-8	Fuse 8, circuit 58 L	22G			

S8/2	Warning buzzer contact (exterior lamps/CL)	5A 10M
S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	9K
S9	Stop lamp switch (2-pole)	37A
S9/1	Stop lamp switch (4-pole)	37A
S16/1	Starter lock-out/backup lamp switch	36A
S17/3	Left door switch	9A
S17/4	Right door switch	6M
S17/8	Trunk lamp switch	38A
S17/11	Left door switch (SBE, entrance/exit lamp)	9M
S17/12	Right door switch (SBE, entrance/exit lamp)	11M
S68/2	Right front seat belt buckle switch (SBE)	10M
S68/2x1	Right front seat belt buckle switch connector (SBE)	10K
W1	Main ground (behind instrument cluster)	
W6	Ground (left wheelhousing in trunk)	
W7	Ground (right wheelhousing in trunk)	
W10	Ground (battery)	
W12	Ground (center console)	
W14	Ground (ABS hydraulic unit bracket)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior)	19F 24F 1I
X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	24H
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	1F

X18	Interior/taillamp harness connector (8-pole)	33F 27I
X24	Headlamp harness connector	27F
X30	Accessory equipment connector block	13A
X34	Right front door contact switch intermediate connector	6G
X42/5	Right door contact switch connector (ATA)	6I
X49/2	Backup lamp/starter lock-out switch connector	36E
X49/3	Backup lamp switch signal connector (ASR/EA) (1-pole)	35D
Y24/3	Seat backrest locking valve	7M
Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	11E
Z81	Circuit 58d connector sleeve	3E
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	





