

A1	Instrument cluster	7M	E4e3	Backup lamp	32A	F1-13	Fuse 13, circuit 56b	15G
A1e1	Left turn signal indicator lamp	8M	E4e4	Stop lamp	32A	F1-14	Fuse 14, circuit 56b	15G
A1e2	Right turn signal indicator lamp	7M	E4e6	Right hand side marker lamp	33A	F1-15	Fuse 15, circuit 56a	14G
A1e3	High beam indicator lamp	8M	E5/1	Left fog lamp	28A	F1-16	Fuse 16, circuit 56a	14G
A1e5	Generator charge indicator lamp	8M	E5/1x1	Left fog lamp connector	28C	K5	Power seat relay module USA	4A
A1e14	Exterior lamp failure indicator lamp	9M	E5/2	Right fog lamp	27A	K24	CF relay module	3M
A1p4	Outside temperature display	5M	E5/2x1	Right fog lamp connector	27C	N2/4	Seat belt warning module USA	2A
A1r1	Instrument illumination rheostat	6M	E6/1	Left turn signal/side marker lamp USA	24A	N7	Exterior lamp failure monitoring module	24M
E1	Left headlamp unit	25A	E6/1e1	Turn signal	25A	N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	9A
E1e1	High beam	26A	E6/1e2	Side marker lamp USA	25A	N26	ATA control module	5A
E1e2	Low beam	26A	E6/2	Right turn signal/side marker lamp USA	23A	N35	Daytime running lamp control module	10M
E1e4	Fog lamp	26A	E6/2e1	Turn signal	23A	R3	Front cigar lighter (with ashtray illumination)	2A
E1e7	Auxiliary high beam	26A	E6/2e2	Side marker lamp USA	23A	R3e1	Illumination	2A
E2	Right headlamp unit	21A	E10/1	Center air outlet illumination	8A	R3x1	Illuminated cigar lighter connector	1C
E2e1	High beam	22A	E10/3	Right air outlet illumination	4M	S1	Exterior lamp switch	16A
E2e2	Low beam	22A	E19/1	Left license plate lamp	39A	S2/1	Ignition/starter switch	19A
E2e4	Fog lamp	22A	E19/2	Right license plate lamp	37A	S4	Combination switch	13A
E2e7	Auxiliary high beam	22A	E21	Center high mounted stop lamp	33A	S4s1	Turn signal switch	13B
E3	Left taillamp unit	29A	F1	Fuse and relay box		S4s2	Headlamp flasher switch	14B
E3e1	Turn signal lamp	29A	F1-2	Fuse 2, circuit 15R	15G	S4s3	Low beam switch	15C
E3e2	Tail/parking lamp	30A	F1-3	Fuse 3, circuit 58R	16G	S4x1	Combination switch connector	13E
E3e3	Backup lamp	30A	F1-4	Fuse 4, circuit 58N	16G	S6	Hazard flasher switch	6A
E3e4	Stop lamp	30A	F1-5	Fuse 5, circuit 15	9G 35G	S8/2	Warning buzzer contact (exterior lamps/CL)	1M
E3e5	Rear fog lamp	30A	F1-6	Fuse 6, circuit 15	8G	S9/1	Stop lamp switch (4-pole)	36A
E3e6	Left hand side marker lamp	31A	F1-7	Fuse 7, circuit 15	35G	S16/3	Starter lock-out/backup lamp switch (transmission range recognition)	34A
E4	Right taillamp unit	31A	F1-8	Fuse 8, circuit 58 L	17G	S16/8	Transmission mode ?B? engagement switch	35A
E4e1	Turn signal lamp	32A	F1-9	Fuse 9, circuit 30	1B			
E4e2	Tail/parking lamp	32A						

S17/3	Left front door switch	2M
S17/4	Right front door switch	4M
S17/8	Trunk lamp switch	38A
W1	Main ground (behind instrument cluster)	
W6	Ground (left wheelhousing in trunk)	
W7	Ground (right wheelhousing in trunk)	
W14	Ground (ABS hydraulic unit bracket)	
W16/2	Ground (component compartment - generator/battery harness noise suppressor)	
Grounds not indicated, components are connected on engine block or bodywork		
X4/1	Terminal block (circuit 30, interior)	12H 20F
X4/10	Terminal block (circuit 30/30 /61e/87L) (6-pole)	16F 20H
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	3H
X18	Interior/taillamp harness connector (8-pole)	23H 33F
X24	Headlamp harness connector	23F 26G
X33/14	CC connector (cockpit/engine) (10-pole)	37F
X34/10	Left front door contact switch multipoint connector	2H
X42/7	Right front door contact switch connector (ATA)	4H
X49/2	Backup lamp/starter lock-out switch connector	34F
Z81	Circuit 58d connector sleeve	6H
Z94	Brake lamp switch n.o. contact connector sleeve (feed from brake lamp switch - S9/1, n.o. contact)	37H

<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>





