



F1	Fuse and relay box	
F1-A	Fuse A, circuit 15R/30	14L
F1-C	Fuse C, circuit 30	1L
F1-G	Fuse G, circuit 15R/30	16L
F1-H	Fuse H, circuit 15R/30	16L
F1-1	Fuse 1, circuit 15R	1L 5L
F1-2	Fuse 2, circuit 15R	15L
F1-9	Fuse 9, circuit 30	15L
K24	CF relay module	12M
M10/3	Left front power window motor	18M
M10/3x1	Left front power window motor connector	18K
M10/4	Right front power window motor	17M
M10/4x1	Right front power window motor connector	17K
M10/5	Left rear power window motor	34M
M10/5x1	Left rear power window motor connector	34K
M10/6	Right rear power window motor	33M
M10/6x1	Right rear power window motor connector	33K
M12	Sliding/pop-up roof drive assembly	11M
N2/4	Seat belt warning module (USA)	8M
N57	CF control module (power windows, sliding/pop-up roof)	19A
S13/2	Sliding/pop-up roof switch	7M
S17/3	Left front door switch	9M
S17/3	Left door switch	10M
S21/1	Left front power window switch (front center console)	21M
S21/2	Right front power window switch (front center console)	19M

S21/3	Left rear power window switch	26M
S21/4	Right rear power window switch	32M
S21/5	Left rear power window switch (front center console)	30M
S21/6	Right rear power window switch (front center console)	23M
S21/7	Rear power windows safety switch (center console)	29M
S78/1	Rear window wiper switch I Continuous wipe II Intermittent wipe	4M
S78/2	Rear window washer switch	3M
S83/4	RB switch (rear center console)	27M
U22	Valid for station wagon	
U23	Valid for cabriolet	
W1	Main ground (behind instrument cluster)	
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior)	12H
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	20H
X23/2	Soft top/power windows connector (8-pole)	27K
X30	Accessory equipment connector block	2M 6M
X44/3	CF intermediate connector (2-pole)	12H
Z7	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	4H
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	

<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>
---

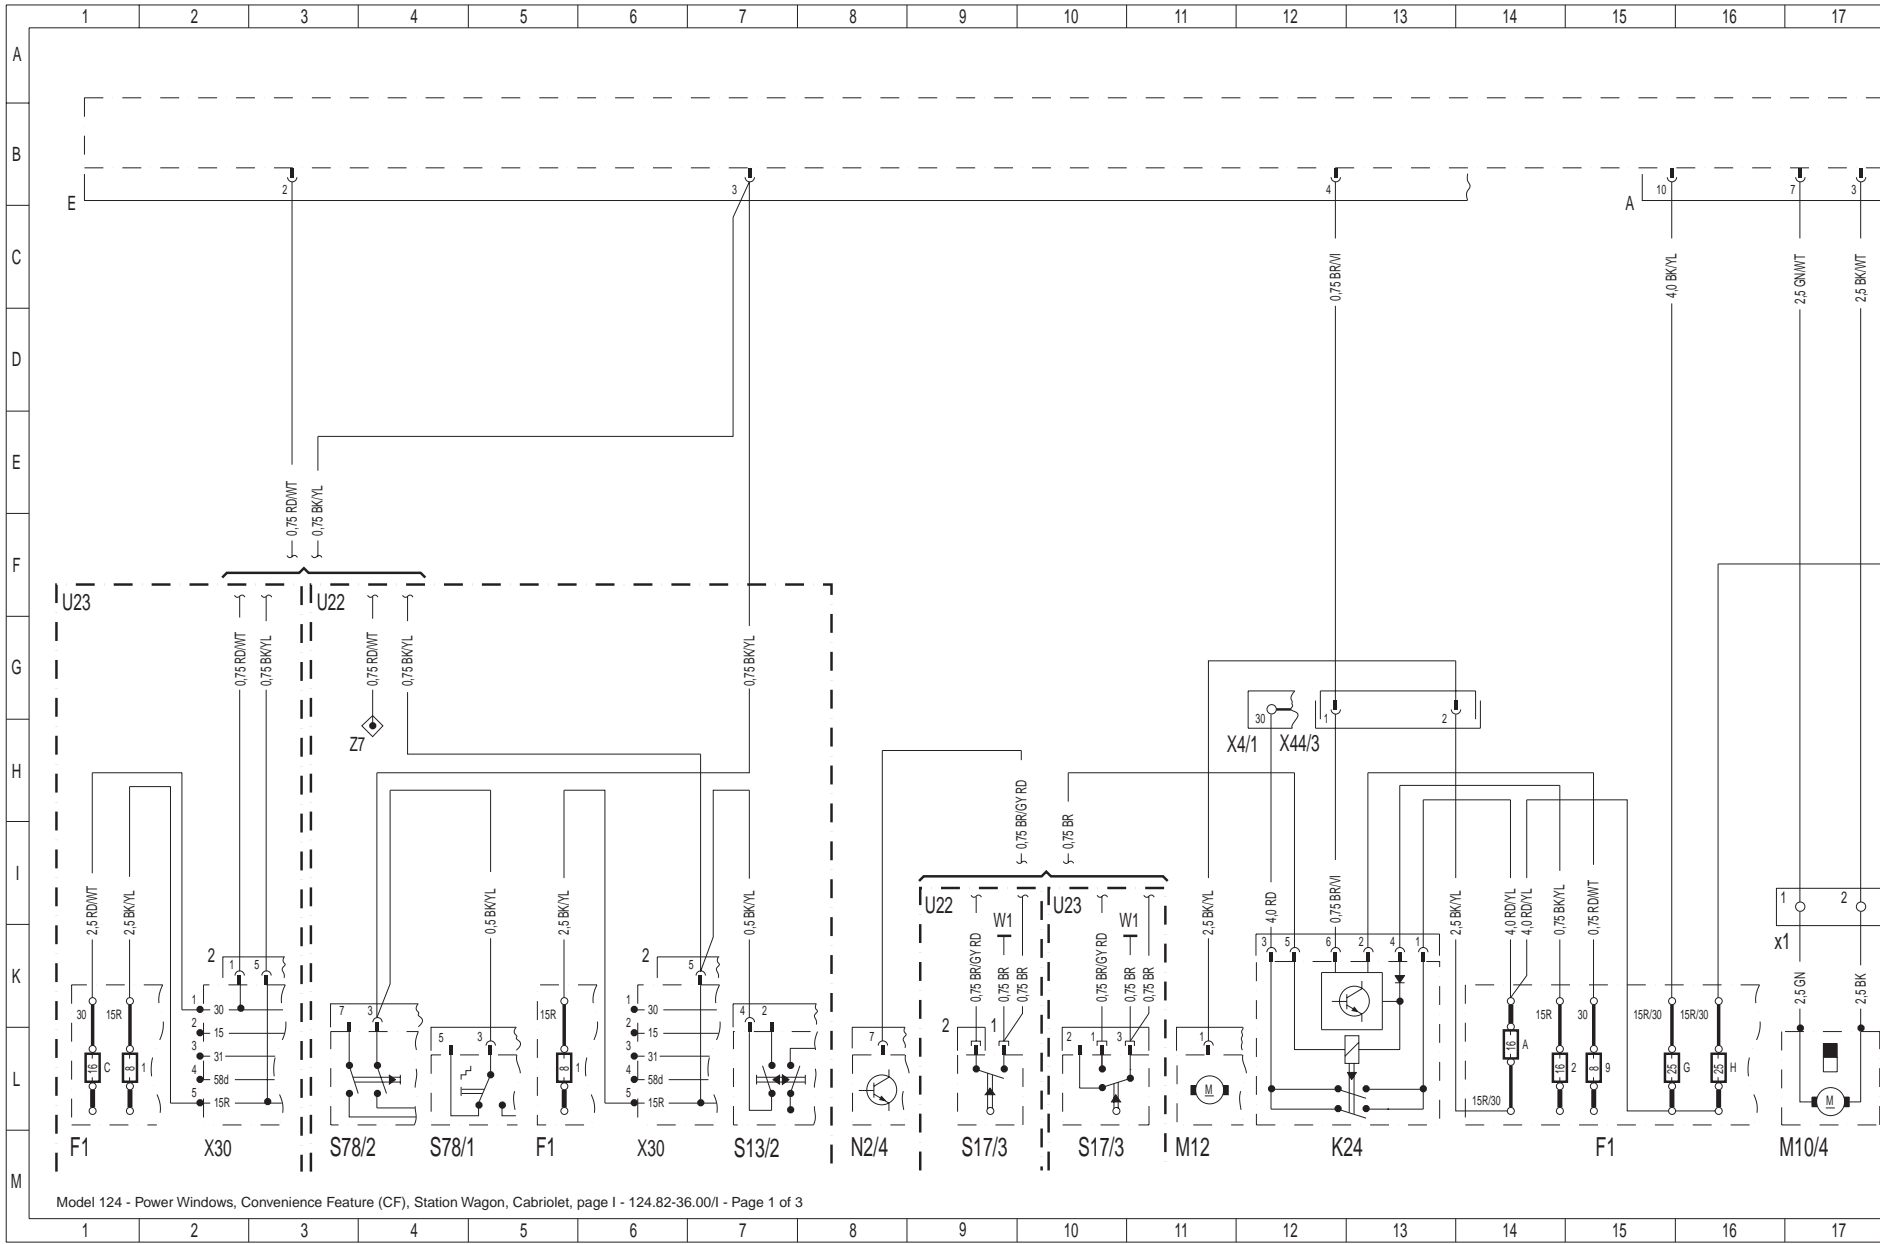

N57

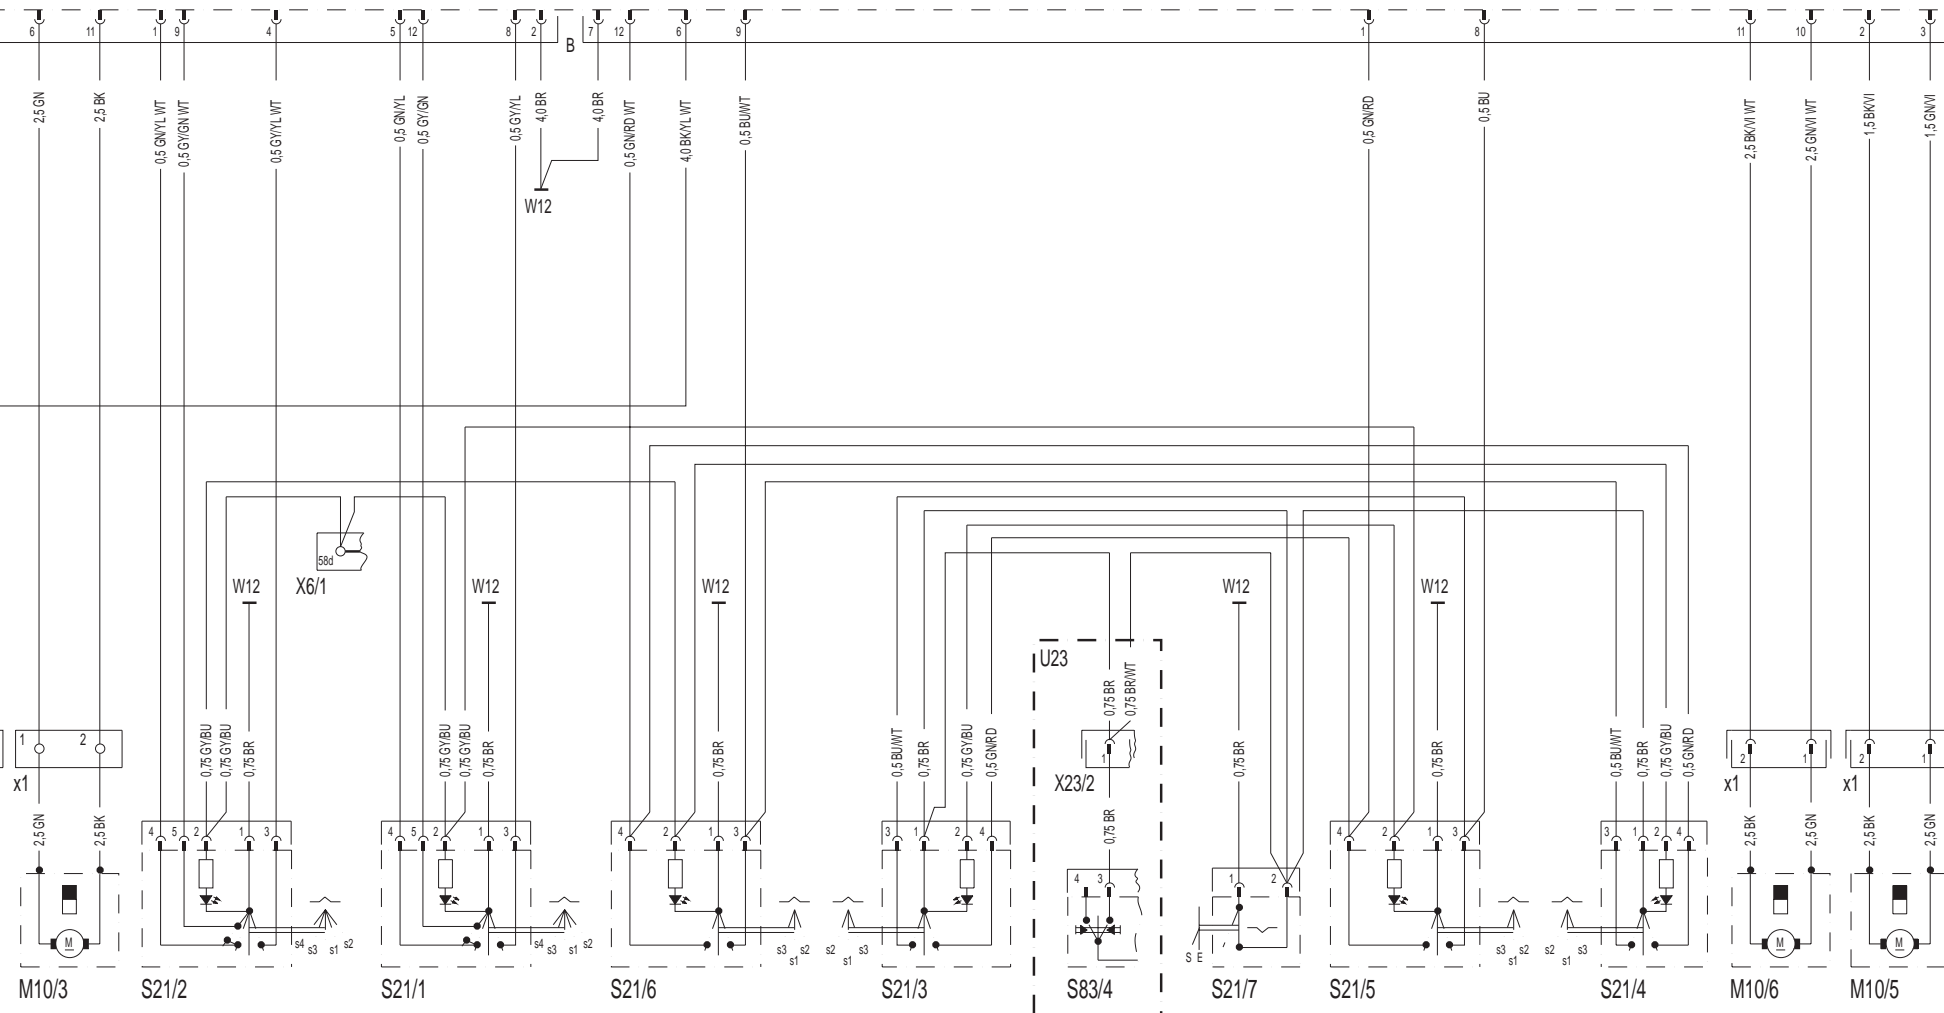

36

A

B

C

D

E

F

G

H

I

K

L

M

PS4-6006-98A  
124.82:36.00' I

36