




A1	Instrument cluster	1A	M4m2	Right auxiliary fan	23M	X26	Interior/engine connector (12-pole)	2G
A1p7	Electronic clock/tachometer	1A	M4m1x1	Left auxiliary fan connector	21K			5G
A9	A/C compressor	7M	M4m2x2	Right auxiliary fan connector	22K			9E
A9k1	Electromagnetic clutch	7M	M4x1	Auxiliary fan connector	19K	X64	Blower regulator/interior harness connector	30G
A9l1	RPM sensor	7M	M9	In-car temperature sensor aspirator blower	36M	X64/4	Dual auxiliary fan connector (2-pole)	22I
A9v1	Erase diode	8M	N3/4	Engine control module (HFM-SFI)	2M	X81/4	Engine/chassis harness connector (EA/CC)	3G
A9x1	A/C compressor connector	6K	N4/1	EA/CC/ISC control module	4M	Y3	Kickdown valve (AT)	4M
A31	Heater supply unit	35M	N4/3	CC/ISC control module	3M	Y3x1	Kickdown valve connector (AT)	5K
A31m1	Coolant circulation pump	35M	N6	A/C compressor control module	7A	Y7	Switchover valve block (7 connections)	28M
A31y3	Monovalve	36M	N22	A/C pushbutton control module (Automatic A/C)	25A	Y7y1	Fresh/recirculated air flap (short stroke)	27M
F1	Fuse and relay box		N29	Electronic blower regulator	30M	Y7y2	Fresh/recirculated air flap (long stroke)	27M
F1-D	Fuse D, circuit 30	26L	R15	Auxiliary fan preresistor	17M	Y7y3	Legroom flaps	28M
F1-5	Fuse 5, circuit 15	2L	S2/1	Ignition/starter switch	32M	Y7y4	Center outlet flaps	28M
F1-7	Fuse 7, circuit 15	8L 26L 37L	S16/6	Kickdown switch	5M	Y7y5	Defroster outlet flaps (long stroke)	29M
F1-9	Fuse 9, circuit 30	1L	S26/1	Heated windshield washer system thermostwitch	17M	Y7y6	Diverter flap	29M
F15	Auxiliary fuse holder (A/C blower motor)	34M	S31/1	Dual function A/C compressor pressure switch (OFF 2.0/30.0 bar, ON 2.6/22.0 bar)	11M	Y7y7	Defroster outlet flaps (short stroke)	30M
K1/2	Overvoltage protection relay module (87E/87L/30a, 9-pole) (Series K1/1)	10M	S32/1	A/C compressor pressure switch (OFF 12.0 bar/ON 16.0 bar)	12M	Y58/1	Purge control valve	9M
K9/1	Auxiliary fan relay module (stage 1)	14M 15M	W1	Main ground (behind instrument cluster)		Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
K10	Auxiliary fan relay module (stage 2)	20M 24M	W10	Ground (battery)				
M2	Blower motor	31M	W14	Ground (ABS hydraulic unit bracket)		Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		
M4	Auxiliary fan	19M 22M		Ground location without designation, component grounded directly on engine, chassis or body.				
M4m1	Left auxiliary fan	21M	X4/1	Terminal block (circuit 30, interior)	33G			
			X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	25I			
			X11/4	Data link connector (DTC readout)	3E 10M			

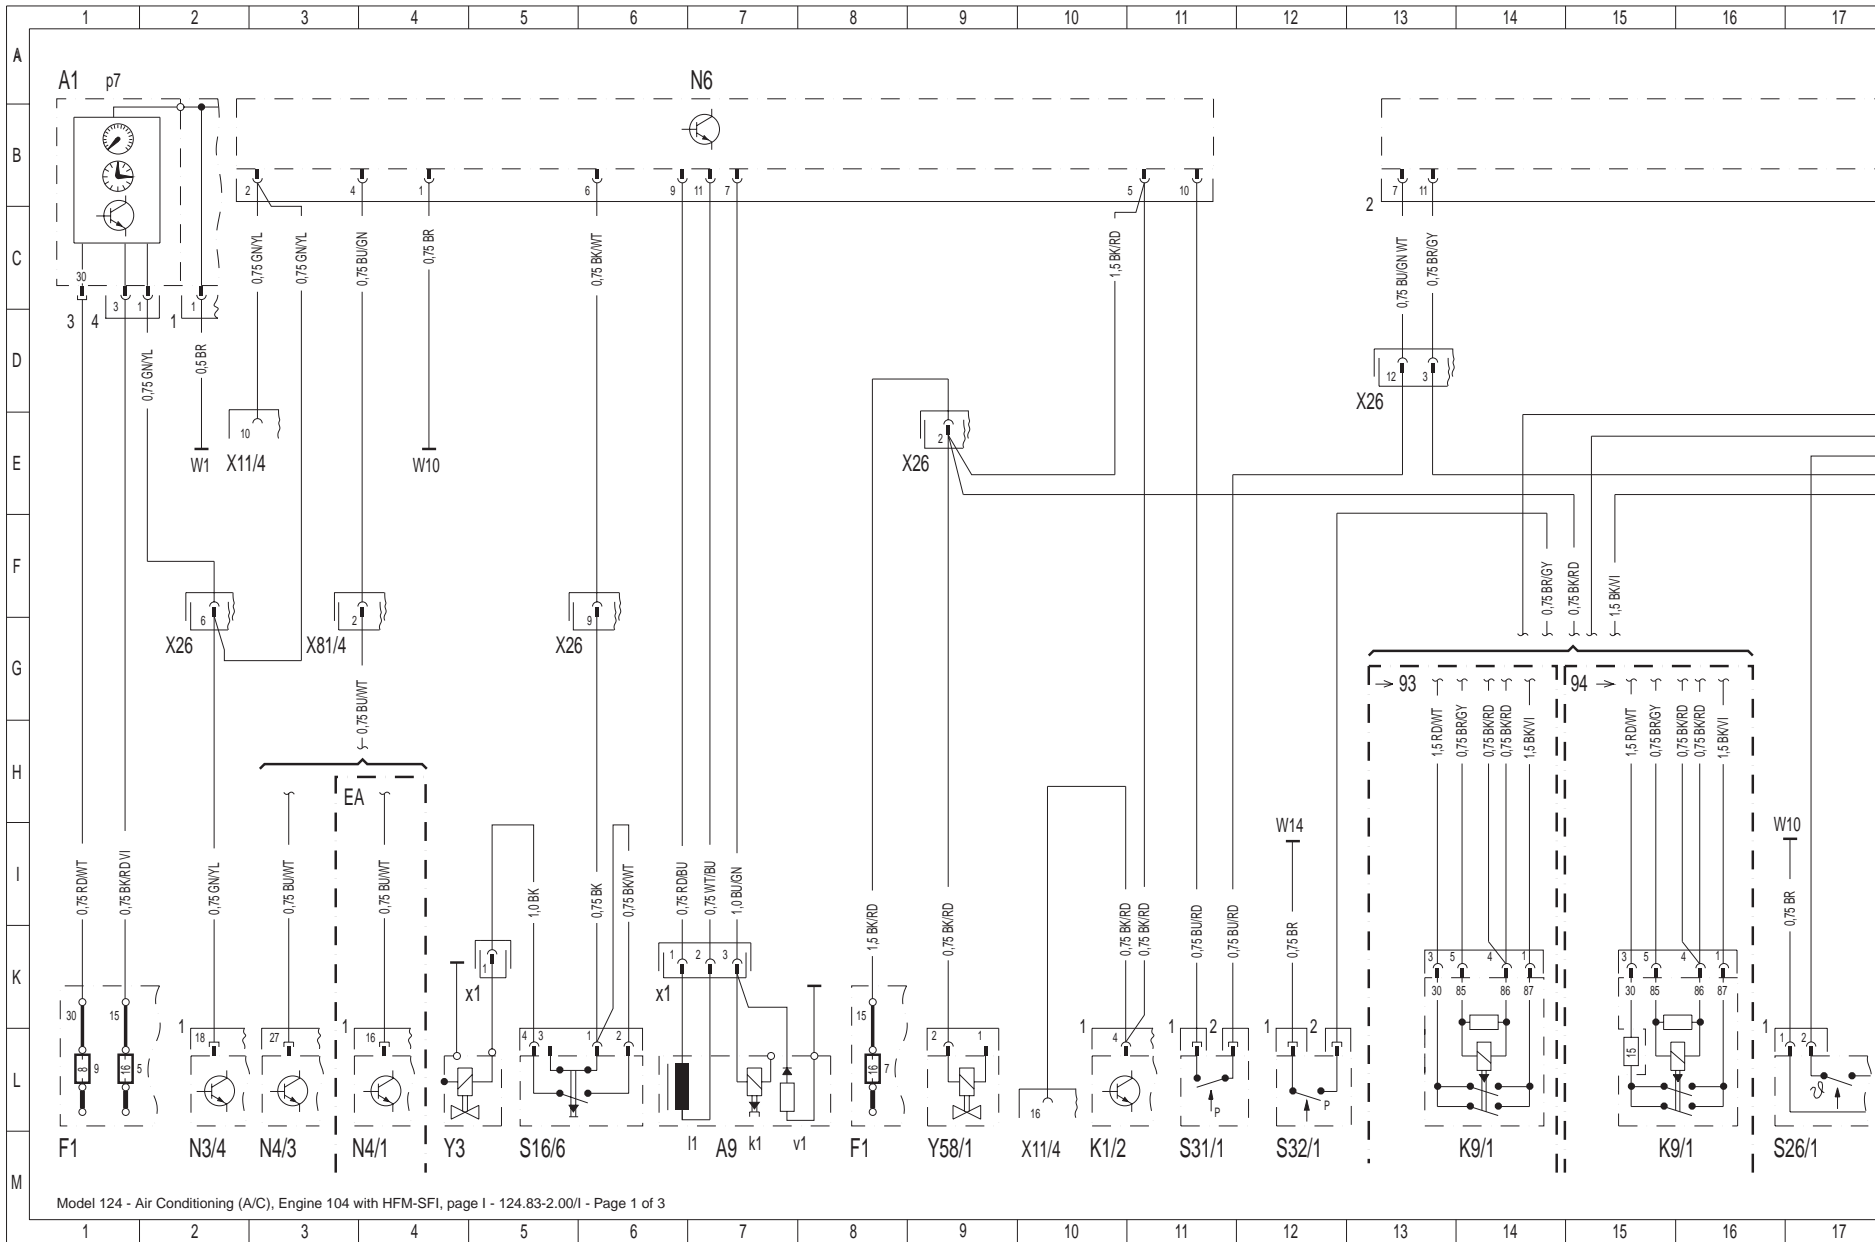

N22

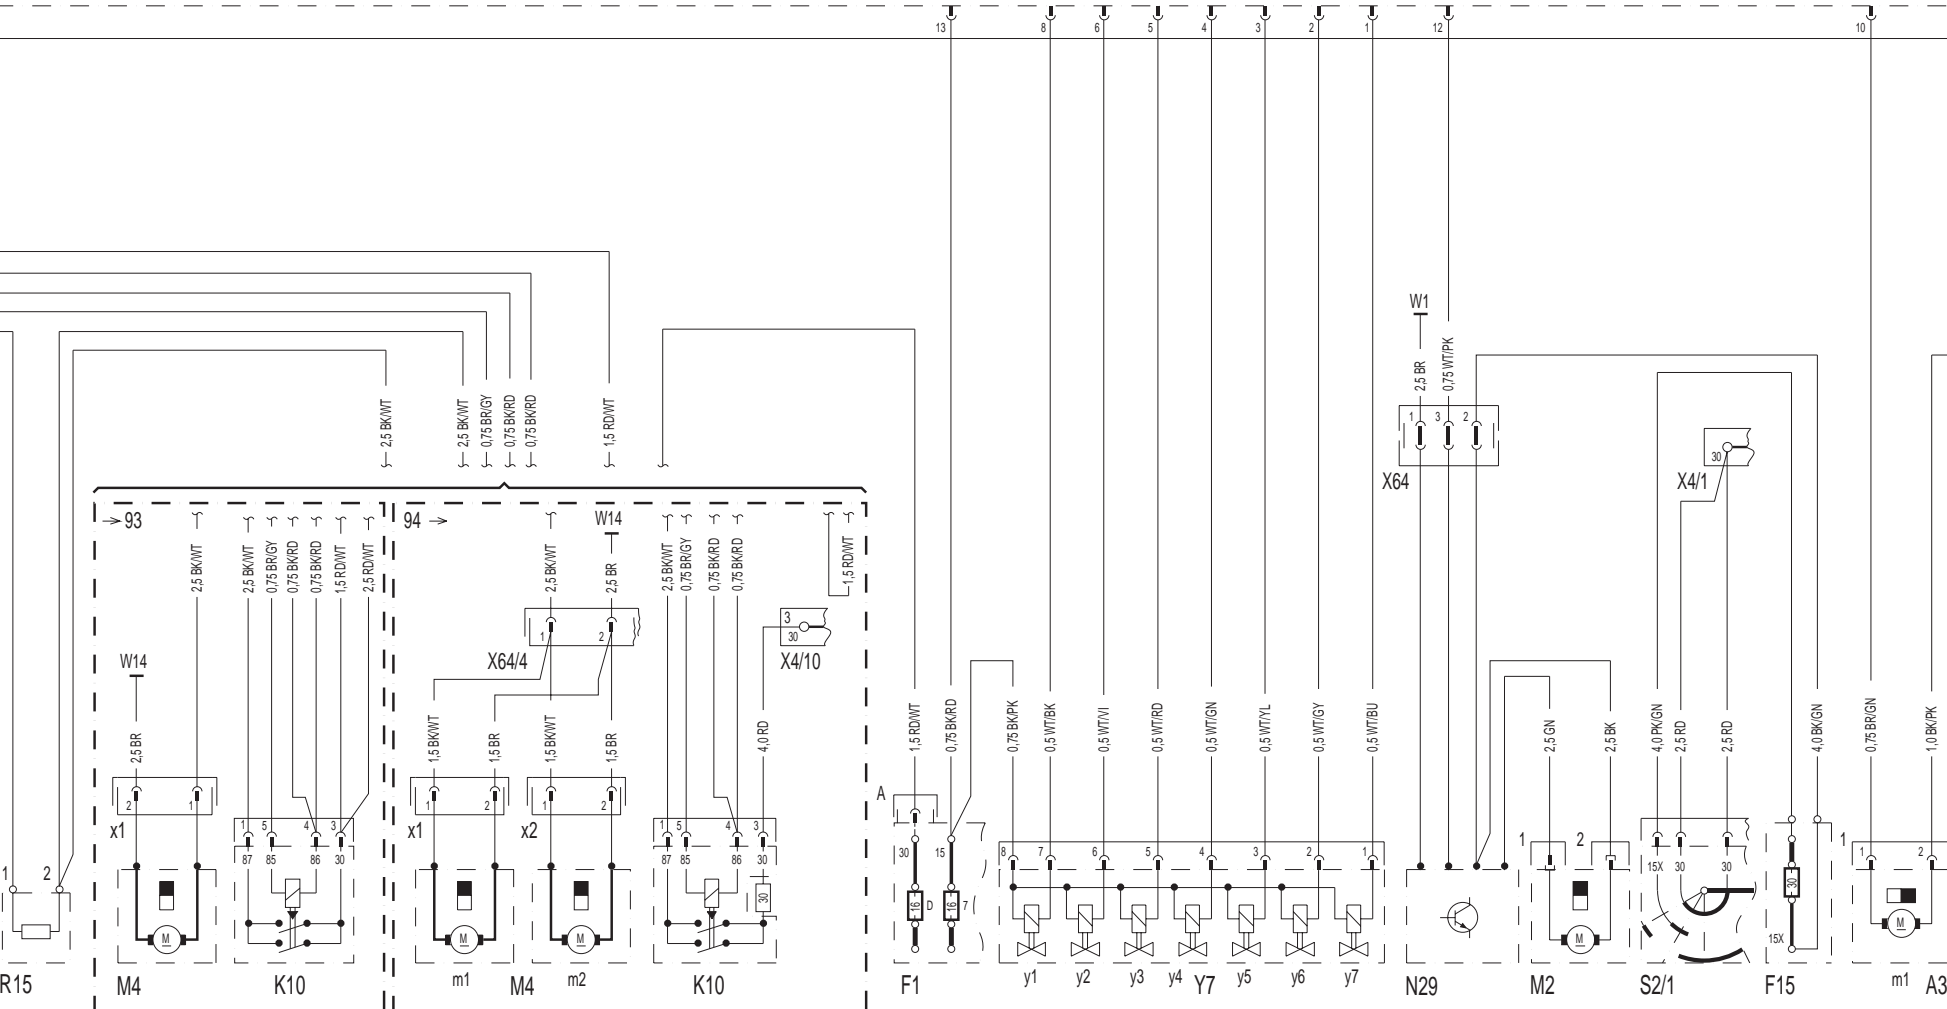

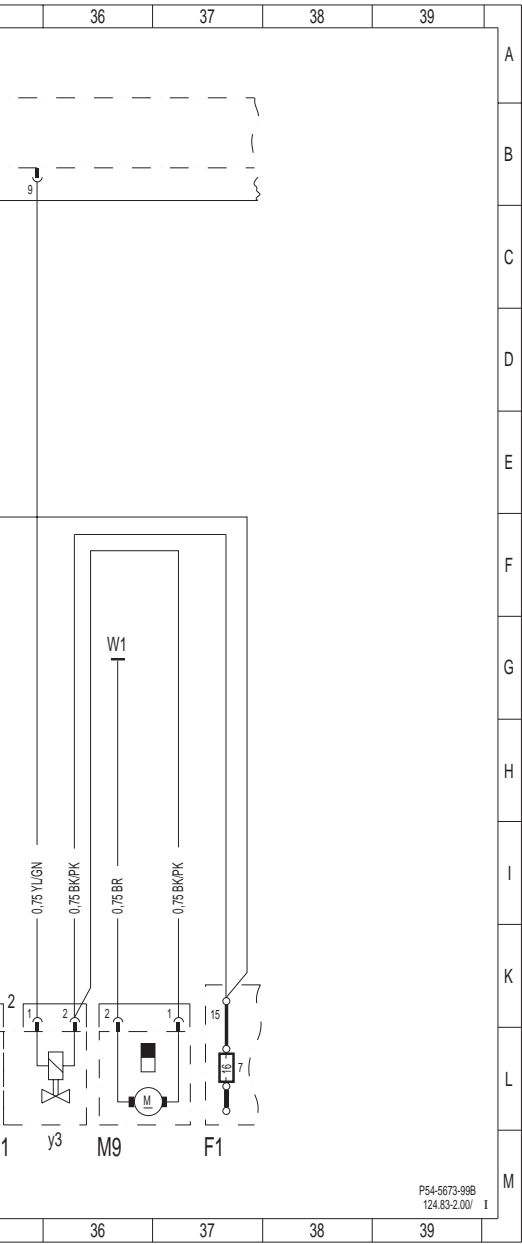

P54-5673-99B
124.83-2.00/ I