

124.91-8.00	Front Heated Seats (HS)	As of MY 1993	Page 1 of 1
-------------	-------------------------	---------------	-------------

F1	Fuse and relay box
F1-A	Fuse A, circuit 15R/30 5L
F22/1	Auxiliary fuse holder (HS) 11M
N25/5	Front HS control module 6A
R13/1	Left front seat cushion heater element 1M
R13/2	Left front backrest heater element 2M
R13/3	Right front seat cushion heater element 9M
R13/4	Right front backrest heater element 10M
S51/1	Left front seat heater switch 4M
S51/2	Right front seat heater switch 8M
W12	Ground (center console)
Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior) 11G
X6/1	Terminal block (circuit 58d) (1- or 2-pole) 6G
X30	Accessory equipment connector block 6M
X54/9	Heated seats voltage supply connector (1-pole) 11G
X55/3	Left ESA connector block 1G
X55/4	Right ESA connector block 9G
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

